

Install Manual Certificate for SD-WAN Controllers

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Scope](#)

[Considerations](#)

[Sign Certificate](#)

[Scenario 1. Certificate for New Controller](#)

[Scenario 2. Renew Certificate for Controller](#)

[Related Information](#)

Introduction

This document describes the procedure to sign Software Defined Wide Area Network (SD-WAN) certificates with manual option.

Prerequisites

Requirements

Cisco recommends that you have knowledge of these topics:

- Cisco Software-defined Wide Area Network (SD-WAN)
- Cisco SD-WAN vManage

Components Used

This document is based on this SD-WAN device and portal:

- vManage Controller
- Plug and Play Portal (PnP)

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

Scope

- This procedure is used when vManage has no connectivity to the Internet.
- You can use this process to sign Certificate Signed Request (CSR) for new controllers or renew certificates.

Considerations

- The basic configuration is applied to the controllers
- Controllers have connectivity between them

If you need information about Controller Deployment, navigate to [Cisco SD-WAN Overlay Network Bring-Up Process](#).

Please visit [Certificate Management](#) if you are interested in other ways of controller SD-WAN certification.

Sign Certificate

Scenario 1. Certificate for New Controller

Step 1. Log in to vManage.

Step 2. Navigate to **Main Menu > Configuration > Devices > Controller > Add Controller**.

🔍 Search

Add Controller ▾ Change Mode ▾

vBond
vSmart

Selection for controller

Step 3. Fill in the controller information and check **Generate CSR** box as shown in this image.

Add vBond

vBond Management IP Address

192.168.50.149

Username

admin

Password

•••••

Generate CSR

Cancel

Add

Controller Information

Step 4. Download CSR file from Main Menu > Configuration > Certificates > Controllers > Three dots > View CSR.

CSR