

Reset a Cisco Business 350 Series Switch Manually or through the CLI

Objective

The Reload function of the Cisco Small Business Switches is useful when certain changes in the settings require a reboot to completely apply the configuration settings, or if the device is not functioning as expected. The configuration settings of the network device get reflected after the device restarts.

The Reset feature is used to remove the running or current configuration settings on the network device and restore it to the original default settings. Manual reset is recommended when the whole device needs to be reconfigured.

This article provides instructions on how to manually reset a Cisco Business 350 series switch as well as how to reload or reset through the CLI.

Applicable Devices | Software Version

- CBS350 ([Data Sheet](#)) | 3.0.0.69 ([Download latest](#))
- CBS350-2X ([Data Sheet](#)) | 3.0.0.69 ([Download latest](#))
- CBS350-4X ([Data Sheet](#)) | 3.0.0.69 ([Download latest](#))

Manually Reset the Switch

When the switch fails to work and cannot be reset by using the web-based utility, the switch can be manually reset to restore the factory default configuration.

Step 1

Disconnect all Ethernet cables from the switch.

Step 2

Using a pin, press and hold the **Reset** button on the switch for 15 to 20 seconds.

Step 3

Once all the port Light-Emitting Diodes (LEDs) light up, release the **Reset** button.

Telnet and SSH services are disabled by default. You will have to access the console of the switch using the computer that is directly connected to your switch through the serial cable.

Step 4

Connect your computer directly to the switch using a serial cable.

Step 5

Log in to the switch console. The default username and password is cisco/cisco.

```
User Name:cisco
Password:*****
```

Step 6

You will be prompted to configure new password for better protection of your network. Press **Y** for Yes or **N** for No on your keyboard.

```
Please change your password from the default settings. Please change the password
for better protection of your network. Do you want to change the password (Y/N) [
Y] ?Y
```

In this example, Y is pressed. If N is pressed, skip to [Step 9](#).

Step 7 (Optional)

Enter the old password then press **Enter** on your keyboard.

```
Please change your password from the default settings. Please change the password
for better protection of your network. Do you want to change the password (Y/N) [
Y] ?Y
Enter old password *****
```

Step 8 (Optional)

Enter and confirm the new password accordingly then press **Enter** on your keyboard.

```
Please change your password from the default settings. Please change the password
for better protection of your network. Do you want to change the password (Y/N) [
Y] ?Y
Enter old password : *****
Enter new password : *****
Confirm new password: *****

switche6f4d3#
```

[Step 9](#). Enter the Global Configuration mode of the switch by entering the following:

```
CBS350#configure terminal
```

Step 10 (Optional)

To change the hostname of your switch, enter the following:

```
CBS350(config)#hostname [hostname]
```

Step 11 (Optional)

To enable the Telnet service on your switch, enter the following command:

```
CBS350(config)#ip telnet server
```

Step 12 (Optional)

To enable the SSH service on your switch, enter the following command:

```
CBS350(config)#ip ssh server
```

Manually Reload the Switch through the CLI

The available commands may vary depending on the exact model of your device.

Step 1

Log in to the switch console. The default username and password is cisco/cisco. If you have configured a new username or password, enter the credentials instead.

```
(User Name:cisco
Password:*****
```

In this example, the switch is accessed through SSH.

Important: When a switch is reloaded, the running configuration file is deleted. Before proceeding with the reload instructions, make sure to save all the running configuration settings to avoid data loss.

Step 2

In the Privileged EXEC mode of the switch, save the configured settings to the startup configuration file, by entering the following:

If you wish to proceed without saving the running configuration settings, skip to [Step 4](#).

```
CBS350(config)#copy running-config startup-config
```

Step 3

Press **Y** for Yes or **N** for No on your keyboard once the Overwrite file [startup-config]... prompt appears.

```
copy running-config startup-config
Overwrite file [startup-config]... (Y/N)[N] ?Y
19-May-2017 15:09:52 %COPY-I-FILECPY: Files Copy - source URL running-config des
tination URL flash://system/configuration/startup-config
19-May-2017 15:09:54 %COPY-N-TRAP: The copy operation was completed successfully
```

Step 4

To reload the switch, enter either of the following commands:

- **reload** - Use the reload command to reload the switch immediately.
- **reload {{in hhh:mm | mmm | at hh:mm [day month]}}** - Use this command to specify scheduled switch reload.

- in hhh:mm | mmm - Schedules a reload of the image to take effect in the specified minutes or hours and minutes. The reload must take place within approximately 24 days.

- at hh:mm - Schedules a reload of the image to take place at the specified time by using a 24-hour format. If you specify the month and day, the reload is scheduled to take place at the specified time and date. If you do not specify the month and day, the reload takes place at the specified time on the current day (if the specified time is later than the current time) or on the next

day (if the specified time is earlier than the current time). Specifying 00:00 schedules the reload for midnight. The reload must take place within 24 hours.

This option can only be used if the system time settings of the switch have been configured. To learn how, click [here](#) for instructions.

- day - Number of the day in the range from 1 to 31.

- month - The month of the year in the range from Jan to Dec.

```
CBS350#reload at 10:00 11 Apr
```

In this example, reload at 10:00 11 Apr is used.

Step 5

Press **Y** for Yes or **N** for No on your keyboard once the This command will reset the whole system and disconnect your current session prompt appears.

```
#reload at 10:00 11 Apr
This command will reset the whole system and disconnect your current session. Re
load is scheduled for 10:00:00 UTC Tue Apr 11 2017 (in 25 hours and 46 minutes).
Do you want to continue ? (Y/N)[N] Y
SG350X#10-Apr-2017 08:14:02 %RNUMISC-N-SRACTIVE: system is scheduled to perform
a restart at 10:00:00 Tue Apr 11 2017 (in 25 hours and 45 minutes).
```

Step 6 (Optional)

To display information about a scheduled reload, enter the following:

```
CBS350#show reload
```

Step 7 (Optional)

To cancel the scheduled reload, enter the **reloadcancel** command.

```
CBS350#reload cancel
```

You will be notified that the scheduled reload was aborted.

You should now have successfully reloaded your Cisco Business 350 series switch through the CLI.

In the example below, the immediate reload is used and Y is entered on both questions.

```
#reload
You haven't saved your changes. Are you sure you want to continue ? (Y/N)[N] Y
This command will reset the whole system and disconnect your current session.
Do you want to continue ? (Y/N)[N] Y
Shutting down ...
Shutting down ...
packet_write_wait: Connection to 192.168.100.101 port 22: Broken pipe
```

Looking for more articles on your CBS350 switch? Check out any of the links below for more information.

[IP Address Settings](#) [Stack Settings](#) [Stacking Mode Selector](#) [Stacking Guidelines](#) [SSH User Authentication](#) [SSH Server Authentication](#) [Password Recovery](#) [Access CLI with PuTTY](#) [Create VLANs](#) [Reset Switch](#)