

ã "ã, Æã, %ã ® è ; "ã « è " ~ ¼ %ã •ã, Æã |ã,,ã "ã,, PID

ã «ã ðã,,ã |ã ¯ã€ãã "ã®è,,†ã¼±æ€§ã®ã½±éÿ;ã,'ã—ã'ã,<ã®ã<ã©ã†ã<ã

æœ€ã^ã®ä;®æfæ,^ã;ãfãf¼ã,,ãf§ãf³ã,^ã,Šã%ã® BIOS

ãfãf¼ã,,ãf§ãf³ã ¯ã€ãã "ã®è,,†ã¼±æ€§ã®ã½±éÿ;ã,'ã—ã'ã¾ã™ã€,

Nexus 3000 ã,ãfãf¼ã,°ã,'ã,ðãffãf

Nexus 3000 ã® PID	æœ€ã^ã®ä;®æfæ,^ã;ãfãf¼ã,,ãf§ãf³ BIOS
N3K-C31128PQ-10GE	7.63
N3K-C3132C-Z N3K-C3164Q-40GE N3K-C3232C N3K-C3264Q	8.34

ACI ãfçãf¼ãf%ã® Nexus 9000 ã,ãfãf¼ã,°ãfã;ãf-ãfãffã,

ã,'ã,ðãffãfãã "ã,ã,ã,ãf³ãf%ã,çãfãf³ NX-OS ãfçãf¼ãf%ã® Nexus 9000 ã,ãfãf¼ã,°

ã,'ã,ðãffãf

Nexus 9000 ã® PID	æœ€ã^ã®ä;®æfæ,^ã;ãfãf¼ã,,ãf§ãf³ BIOS
N9K-C92160YC-X N9K-C92304QC N9K-C9232C N9K-C9236C N9K-C9272Q N9K-C93108TC-EX N9K-C93120TX N9K-C93128TX N9K-C93180YC-EX N9K-C9332PQ N9K-C9372PX N9K-C9372PX-E N9K-C9372TX N9K-C9372TX-E N9K-C9396PX N9K-C9396TX	7.63
N9K-SUP-A N9K-SUP-B	8.34

Nexus 9500 R *ã, ·ãfãf¼ã, °ãfã, ðãfã, «ãf¼ãf%ã Šã, ^ã³ãfã, ãfãfãfã, ¯ãfã, ãfãf¼ãfã»*

Nexus 9500 <i>ã®</i> PID	<i>ææ€ãã®ã;®ææ, ^ã; BIOS</i> <i>ãfãf¼ã, ãfãf³</i>
N9K-SUP-B	8.34

ã½±éÿ;ã, 'ã—ã'ã, < Cisco NX-OS ã, ½ãfãf^ã, |ã, Šã, çãfãfãf¼ã, ¹

è, †ã¼±æ€ãã®ã™ã, < Cisco NX-OS ã, ½ãfãf^ã, |ã, Šã, çãfãfãf¼ã, ¹ã«ã®ã, ãã|ãã®ã"ã®ã, çãfãfã, ðã, ¶ãfã®ãæ€ã;®ææ, ^ã;ã, ½ãfã

Cisco NX-OS ã®è£½ã" ID ã®çç°èª

ç®;ç†è€...ãã®ãfãfã, ðã, ¹ã® CLI ã®š show inventory
ã, ³ãfãfãfãfã, 'ã½ç"ã™ã, <ã"ã"ã«ã, ^ã, Šè£½ã" ID ã, çç°èªãšããã¼ã™ã€,
PID N3K-C3232C

ã®ãfã, ðãfã, ¹ã®ã'ã^ãã, ³ãfãfãfãfã®ã†°ãŠ>ã¼ãæ¬ã®ã, ^ã†ã«ãªã, Šã

<#root>

switch#

show inventory

NAME: "Chassis", DESCR: "Nexus3000 C3232C Chassis"

PID: N3K-C3232C

, VID: V02 , SN: FOC20291JA0

NAME: "Slot 1", DESCR: "32x40/100G QSFP28 2x10G SFP+ Ethernet Module"

PID: N3K-C3232C , VID: V02 , SN: FOC20291JA0

NAME: "Power Supply 1", DESCR: "Nexus3000 C3232C Chassis Power Supply"

PID: NXA-PAC-650W-PI , VID: V01 , SN: LIT20362Z6G

Cisco NX-OS ã® BIOS ãfãf¼ã, ãfãf³ã®çç°èª

ç®;ç†è€...ãã®ãfãfã, ðã, ¹ã® CLI ã®š show version

ã, ³ãfãfãfãfã, 'ã½ç"ã™ã, <ã"ã"ã«ã, ^ã, Šè£½ã"ãfãfã, ðã, ¹ã®ã®ÿè;ããã, ãã|ã, ðã, <

Cisco NX-OS ã® BIOS ãfãf¼ã, ãfãf³ã, çç°èªãšããã¼ã™ã€,

ãfãfã, ðã, ¹ã® Cisco NX-OS BIOS ãfãf¼ã, ãfãf³ 8.32

ã, 'ã®ÿè;ãã—ã|ã, ðã, <ã'ã^ãã, ³ãfãfãfãfã®ã†°ãŠ>ã¼ãæ¬ã®ã, ^ã†ã«ãªã, Šã

<#root>

N9K-A#

show version

Cisco Nexus Operating System (NX-OS) Software

<snip>

.
.
Software

BIOS: version 08.32

Cisco NX-OS

CLI show version

Cisco NX-OS 7.0(3)I5(1)
Copyright (C) 2002-2016, Cisco and/or its affiliates.
All rights reserved.

nxos-switch# show version

Cisco Nexus Operating System (NX-OS) Software

TAC support: http://www.cisco.com/tac

Copyright (C) 2002-2016, Cisco and/or its affiliates.

All rights reserved.

The copyrights to certain works contained in this software are owned by other third parties and used and distributed under their own licenses, such as open source. This software is provided "as is," and unless otherwise stated, there is no warranty, express or implied, including but not limited to warranties of merchantability and fitness for a particular purpose. Certain components of this software are licensed under the GNU General Public License (GPL) version 2.0 or GNU General Public License (GPL) version 3.0 or the GNU Lesser General Public License (LGPL) Version 2.1 or Lesser General Public License (LGPL) Version 2.0.

A copy of each such license is available at
http://www.opensource.org/licenses/gpl-2.0.php and
http://opensource.org/licenses/gpl-3.0.html and
http://www.opensource.org/licenses/lgpl-2.1.php and
http://www.gnu.org/licenses/old-licenses/library.txt.

Software

BIOS: version 07.57
NXOS: version 7.0(3)I5(1) [build 7.0(3)I5(0.9)]
BIOS compile time: 06/29/2016
NXOS image file is: bootflash:///nxos.7.0.3.I5.0.9.bin
NXOS compile time: 8/1/2016 23:00:00 [08/02/2016 00:30:32]

.
.
.

ã, çãffãf—ã, °ãf-ãf¼ãf%ã®ä, €éf"ã"ã—ã | BIOS
ã, ã, çãffãf—ã, °ãf-ãf¼ãf%ã®ä, <ã;...è | ã®ä, ã, Šã¾ã®ä™ã€,
ã"ã®é ...ã«çª°ã®ä™ã, ã, Šã, Çã<ã®è£½ã"ã®ä, ½ãf•ãf^ã, | ã, Šã, çã, 'ã, çãffãf—ã, °ãf-ãf¼ãf%ã®ä, €éf"ã"ã—ã | BIOS
ã, çãffãf—ã, °ãf-ãf¼ãf%ã®ä, <ã;...è | ã®ä, ã, Šã, çã, 'ã, çãffãf—ã, °ãf-ãf¼ãf%ã®ä, €éf"ã"ã—ã | BIOS
ã, çãffãf—ã, °ãf-ãf¼ãf%ã®ä, <ã;...è | ã®ä, ã, Šã, çã, 'ã, çãffãf—ã, °ãf-ãf¼ãf%ã®ä, €éf"ã"ã—ã | BIOS

Nexus 3000 ã, ãfãf¼ã, °ã, ã, ãffãf¼š [CSCvj14135](#)

Cisco NX-OS ã, ½ãf•ãf^ã, ã, Šã, çã ãfãfãf¼ã, 1	ã"ã®è, †ã¼±æ£Šã«ã¾ã™ã, <æœ€ã^ã®ä;®æfãfãfãf¼ã, 1	ãfãf¼ã
7.0(3)I4 ã, ^ã, Šã, ,ã%®	7.0(3)I7(5)	7.0(3)I7
7.0(3)I4	7.0(3)I7(5)	7.0(3)I7
7.0(3)I5	7.0(3)I7(5)	7.0(3)I7
7.0(3)I6	7.0(3)I7(5)	7.0(3)I7
7.0(3)I7	7.0(3)I7(5)	7.0(3)I7
9.2(1)	è, †ã¼±æ£Šãªã—	9.2(2)

ACI ãfçãf¼ãf%ã® Nexus 9000 ã, ãfãf¼ã, °ãfã, ãf-ãfãfãfã, ã, ã, ãffãf¼š [CSCvk70903](#)

Cisco NX-OS ã, ½ãf•ãf^ã, ã, Šã, çã ãfãfãf¼ã, 1	ã"ã®è, †ã¼±æ£Šã«ã¾ã™ã, <æœ€ã^ã®ä;®æfãfãfãf¼ã, 1	ãfãf¼ã
13.1 ã, ^ã, Šã%®	13.2(11)	14.0(3d)
13.1	13.2(11)	14.0(3d)
13.2	è, †ã¼±æ£Šãªã—	14.0(3d)
14.0	è, †ã¼±æ£Šãªã—	14.0(3d)

ã, ã, çãfãf%ã, çãfãf³ NX-OS ãfçãf¼ãf%ã® Nexus 9000 ã, ãfãf¼ã, °ã, ã, ãffãf¼š [CSCvj14135](#)

Cisco NX-OS ã, ½ãf•ãf^ã, ã, Šã, çã ãfãfãf¼ã, 1	ã"ã®è, †ã¼±æ£Šã«ã¾ã™ã, <æœ€ã^ã®ä;®æfãfãfãf¼ã, 1	ãfãf¼ã
7.0(3)I4 ã, ^ã, Šã, ,ã%®	7.0(3)I7(5)	7.0(3)I7
7.0(3)I4	7.0(3)I7(5)	7.0(3)I7

Cisco NX-OS ã,½ãf•ãf^ã,ã,šã,ç ãfãfãf¼ã,¹	ã“ã®è,,†ã¼±æ€šã«ã³¼ã™ã,æœ€ã^ã®ãž®æ£ãfãfãf¼ã,¹	ãfãf
7.0(3)I5	7.0(3)I7(5)	7.0(3)I7
7.0(3)I6	7.0(3)I7(5)	7.0(3)I7
7.0(3)I7	7.0(3)I7(5)	7.0(3)I7
9.2	è,,†ã¼±æ€šãªã—	9.2(2)

Nexus 9500 R ã,ãfãf¼ã,°ãf©ã,ããfãã,«ãf¼ãf%ããšã,^ã³ãf•ã,ãf-ãfããfã,ãfãã,ãfããf¼ããf«i¼š [CSCvk70905](#)

Cisco NX-OS ã,½ãf•ãf^ã,ã,šã,ç ãfãfãf¼ã,¹	ã“ã®è,,†ã¼±æ€šã«ã³¼ã™ã,æœ€ã^ã®ãž®æ£ãfãfãf¼ã,¹	ãfãf
7.0(3)F1	7.0(3)F3(5)	7.0(3)F3
7.0(3)F2	7.0(3)F3(5)	7.0(3)F3
7.0(3)F3	7.0(3)F3(5)	7.0(3)F3
9.2	è,,†ã¼±æ€šãªã—	9.2(2)

é-çé£æf...ã ±

Cisco Nexus ã,ã,ããfããfãã«æœ€é©ãª Cisco NX-OS ã,½ãf•ãf^ã,ã,šã,ç
ãfããfãf¼ã,¹ã®çç°èªãã«é-çã—ã |ã,µãfããf¼ããfãã£ãž...è |ããªã 'ã^ã-ã«ã»ã,ãã®
ã,çãf%ããfãã,ãã,¶ãããããšã,^ã,šæ-ã—ã,,ãfããfãf¼ã,¹ã£æž''ã¥''ãã,£ã |ã,,ã,ã 'ã^ã-

[Cisco MDS ã,ãfããf¼ã,°ã,ã,ããfããf](#)

[VMware ã'ã' Cisco Nexus 1000V ã,ã,ããfããf](#)

[Cisco Nexus 3000 ã,ãfããf¼ã,°ãšã,^ã³ 3500 ã,ãfããf¼ã,°ã,ã,ããfããf](#)

[Cisco Nexus 5000 ã,ãfããf¼ã,°ã,ã,ããfããf](#)

[Cisco Nexus 5500 ãf—ãf©ããfããfããã,©ãf¼ããf ã,ã,ããfããf](#)

[Cisco Nexus 6000 Series Switches](#)

[Cisco Nexus 7000 ã,ãfããf¼ã,°ã,ã,ããfããf](#)

[Cisco Nexus 9000 ã,ãfããf¼ã,°ã,ã,ããfããf](#)

[ACI ãfçãf¼ããf%ãã® Cisco Nexus 9000 ã,ãfããf¼ã,°ã,ã,ããfããf](#)

Cisco UCS ã«æœ€é©ãªª Cisco NX-OS ã,½ãf•ãf^ã,ã,šã,ç
ãfããfããf¼ã,¹ã®çç°èªãã«é-çã—ã |ã,µãfããf¼ãããfãã£ãž...è |ããªã 'ã^ã-ã«ã»ããfããfãã,ãã
ããžããf¼ããfãã«è''è¼%ãããã,£ãã |ã,,ã,æž''ã¥''ãfããfããf¼ã,¹ã«é-çã™ã,ããf%ãã,ããfããfããfãã,ãã

翻訳について

シスコは世界中のユーザにそれぞれの言語でサポート コンテンツを提供するために、機械と人による翻訳を組み合わせて、本ドキュメントを翻訳しています。ただし、最高度の機械翻訳であっても、専門家による翻訳のような正確性は確保されません。シスコは、これら翻訳の正確性について法的責任を負いません。原典である英語版（リンクからアクセス可能）もあわせて参照することを推奨します。