MSEソフトウェアリリース7.2 HAの設定と導入

内容

概要
前提条件
要件
使用するコンポーネント
表記法
背景説明
注意事項と制約事項
MSE 仮想アプライアンス用の HA 設定シナリオ(ネットワーク接続)
直接接続の場合の HA 設定
MSE 物理アプライアンス用の HA 設定シナリオ
MSE 物理アプライアンス用の HA 設定シナリオ
関連情報

概要

Cisco Mobility Services Engine (MSE) ソフトウェア リリース 7.2 では、物理および仮想アプラ イアンスにハイ アベイラビリティ (HA) サポートが追加されています。このドキュメントでは 、設定と導入に関するガイドライン、および MSE ハイ アベイラビリティを Cisco Unified WLAN に追加し、Context Aware サービスまたは Adaptive wIPS、あるいはこれらの両方を実行すると きのトラブルシューティング ティップスを提供します。このドキュメントの目的は、MSE ハイ アベイラビリティについて説明し、MSE の HA 導入シナリオを提供することです。

注:このドキュメントでは、MSE HAに関係しないMSEおよび関連コンポーネントの設定の詳細 は説明しません。これらの情報は、他のドキュメントに含まれており、関連資料に示してありま す。Context Aware モビリティ サービスの設定および設計に関するドキュメントのリストについ ては、「<u>関連情報</u>」セクションを参照してください。適応型 wIPS の設定もこのドキュメントで は扱いません。

前提条件

要件

このドキュメントに特有の要件はありません。

使用するコンポーネント

このドキュメントの内容は、特定のソフトウェアやハードウェアのバージョンに限定されるもの ではありません。

表記法

ドキュメント表記の詳細は、『<u>シスコ テクニカル ティップスの表記法』を参照してください。</u>

背景説明

MSE は、複数の関連サービスを実行できるプラットフォームです。これらのサービスには、ハイ レベル セキュリティ機能があります。そのため、最高レベルのサービスを保証するために HA を 考慮することは重要です。

HA をイネーブルにすると、すべてのアクティブ MSE は、別の非アクティブ インスタンスでバ ックアップされます。MSE HA は、ハイ アベイラビリティ セットアップを設定、管理およびモ ニタするヘルス モニタを導入します。プライマリ MSE とセカンダリ MSE の間でハートビート が維持されます。ヘルス モニタは、データベースのセットアップ、ファイルのレプリケーション 、アプリケーションのモニタリングを行います。プライマリ MSE で障害が発生し、セカンダリ MSE に切り替わると、プライマリ MSE の仮想アドレスがトランスペアレントに切り替わります 。

このセットアップ(図1 を参照)は、ハイ アベイラビリティ用に Cisco Mobility Services Engine(MSE)をイネーブルにした一般的な Cisco WLAN 環境を示します。HA サポートは、 MSE-3310、MSE-3350/3355 および ESXi の仮想アプライアンスで使用できます。

図 1. ハイ アベイラビリティでの MSE の導入



注意事項と制約事項

次に、MSE HA アーキテクチャに関する情報を示します。

- MSE 仮想アプライアンスは 1:1 HA のみをサポートします。
- 1 つのセカンダリ MSE では最大2 つのプライマリ MSE をサポートできます。HA ペア マト リクス(図2および3)を参照してください。
- •HAは、ネットワーク接続および直接接続をサポートします。
- MSE レイヤ2 冗長性のみがサポートされます。ヘルス モニタ IP および仮想 IP の両方が、 同じサブネット上にあり、Network Control System(NCS)からアクセスできる必要があり ます。レイヤ3 冗長性はサポートされません。
- ヘルス モニタ IP および仮想 IP は異なる IP でなければなりません。
- 手動フェールオーバーと自動フェールオーバーのいずれかを使用できます。
- •手動フェールバックと自動フェールバックのいずれかを使用できます。
- プライマリ MSE とセカンダリ MSE は、同じソフトウェア バージョンを実行する必要があります。
- アクティブな各プライマリ MSE は別の非アクティブ インスタンスによりバックアップされ ます。セカンダリ MSE は、フェールオーバー手順の開始後にアクティブになります。
- •フェールオーバー手順は手動または自動です。
- ・登録されているプライマリ MSE ごとに 1 つのソフトウェアおよびデータベース インスタン スが存在します。

			Secondary	Server Type		
Primary Server Type	3310	3350	3355	VA-Low	VA-Standard	VA-High
3310	Y	Y	Y	N	N	N
3350	N	Y	Y	N	N	N
3355	N	Y	Y	N	N	N
VA-Low	N	N	N	Y	Y	Y
VA-Standard	N	N	N	N	Y	Ŷ
VA-High	N	N	N	N	N	Y

図 2. MSE HA サポート ペア マトリクス

図 3. MSE HA N1:ペア マトリクス

Secondary Server	Primary Server
3310	N:1 not supported
3350	Two 3310 servers are supported
3355	Two 3310 servers are supported
3355	Two 3350 servers are supported
3355	One 3310 and one 3350 are supported

MSE 仮想アプライアンス用の HA 設定シナリオ(ネットワーク 接続)

次に、MSE 仮想アプライアンス(VA)の HA 設定の例を示します(<u>図 4</u> を参照してください)。 この場合、これらは次のように設定されます。

• プライマリ MSE VA仮想 IP : [10.10.10.11]ヘルス モニタ インターフェイス (Eth0) : [10.10.10.12]

・セカンダリ MSE VA仮想 IP: [None]ヘルス モニタ インターフェイス(Eth0): [10.10.10.13] 注: VAごとにアクティベーションライセンス(L-MSE-7.0-K9)が必要です。これは、VA の HA 設 定に必要です。

図 4. HA での MSE 仮想アプライアンス



詳細については、<u>MSE 仮想アプライアンスの関する Cisco ドキュメント</u>を参照してください。

次に一般的な手順を示します。

1. MSE の VA インストールを完了し、すべてのネットワーク設定が満たされていることを確認します。



2. 最初のログイン時に Setup Wizard を起動します。

```
Cisco Mobility Service Engine
mse login: root
Password:
Last login: Mon Feb 13 17:31:37 on tty1
Enter whether you would like to set up the initial
parameters manually or via the setup wizard.
Setup parameters via Setup Wizard (yes/no) [yes]: _
```

 必要な項目(ホスト名やドメインなど)に入力します。 ハイ アベイラビリティの設定手順 で YES と入力します。

```
Current hostname=[mse]
Configure hostname? (Y)es/(S)kip/(U)se default [Yes]:
The host name should be a unique name that can identify
the device on the network. The hostname should start with
a letter, end with a letter or number, and contain only
letters, numbers, and dashes.
Enter a host name [mse]: mse1
Current domain=[]
Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s
Current role=[Primary]
Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]:
```

4. 次の内容を入力します。ロールの選択:[1 for Primary]ヘルス モニタ インターフェイス :[eth0]*^{*ネットワーク} アダプタ 1 にマッピングされるネットワーク設定(サンプル スクリーンショットを参 _{照してください}

)

Show All Devices	Add Remove	Connected
Hardware	Summary	Connect at power on
 Memory (edited) CPUs Video card VMCI device SCSI controller 0 Hard disk 1 CD/DVD Drive 1 Network adapter 1 (et al. 1) Network adapter 2 (et al. 1) 	8192 MB 2 Video card Restricted LSI Logic Parallel Virtual Disk CD/DVD Drive 1 edite vlan 10 edite vlan 10	Adapter Type Current adapter: E1000 MAC Address 00:50:56:89:01:d9 Automatic Manual Network Connection Network label:
		vlan 10 VM Network vlan 104 vlan 21 vlan 20 vlan 12 vlan 11 vlan 10 DMZ

	Enter a host name [mse]: mse1
	Current domain=[] Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s
	Current role=[Primary] Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]:
	High availability role for this MSE (Primary/Secondary)
	Select role [1 for Primary, 2 for Secondary] [1]:
	Health monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves
	Select Health Monitor Interface [eth0/eth1] [eth0]: _
5.	直接接続インターフェイスの選択:[none]。
	Health monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves
	Select Health Monitor Interface [eth0/eth1] [eth0]:
	Direct connect configuration facilitates use of a direct cable connection betwee
	n the primary and secondary MSE servers. This can help reduce latencies in heartbeat response times, data replication and
	failure detection times. Please choose a network interface that you wish to use for direct connect. You s
	hould appropriately configure the respective interfaces.
	\"none\" implies you do not wish to use direct connect configuration.
	Select direct connect interface [eth0/eth1/none] [none]: _
6.	次の内容を入力します。仮想 IP アドレス:[10.10.10.11]ネットワーク マスク
	: [255.255.255.0]リカバリ モードでの MSE の起動
	:[No] Select direct connect intenface [eth9/eth1/none] [none]:
	Enter a Virtual IP address for first this primary MSE server
	Enter Virtual IP address [1.1.1.1]: 10.10.10.11
	Enter the network mask for IP address 10.10.10.11.
	Enter network mask [1.1.1.1]: 255.255.255.0

Choose to start the server in recovery mode. You should choose yes only if this primary was paired earlier and you have now ost the configuration from this box. And, now you want to restore the configuration from Secondary via NCS Do you wish to start this MSE in HA recovery mode ?: (yes/no): no_

7. 次の内容を入力します。Eth0 の設定:[Yes]Eth0 IP アドレスの入力:[10.10.10.12]ネットワ ーク マスク:[255.255.255.0]デフォルト ゲートウェイ

^{: [10.10.10.1]}

Current IP address=[1.1.1.10] Current eth0 netmask=[255.255.255.0] Current gateway address=[1.1.1.1] Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes] Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.12 Enter the network mask for IP address 10.10.10.12. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1_ 8. セカンド イーサネット インターフェイス (Eth1)は使用されません。eth1 インターフェイ スの設定

: [skip]

The second ethernet interface is currently disabled for this machine. Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s

9. Setup Wizard を続行します。クロック同期化のために NTP サーバをイネーブルにすること は重要です。推奨タイム ゾーンは UTC です。

Domain Name Service (DNS) Setup DNS is currently enabled. No DNS servers currently defined Configure DNS related parameters? (Y)es/(S)kip/(U)se default [Yes]: s Current timezone=[America/New_York] Configure timezone? (Y)es/(S)kip/(U)se default [Yes]: Enter the current date and time. Please identify a location so that time zone rules can be set correctly. Please select a continent or ocean. 1) Africa 2) Americas 3) Antarctica 4) Arctic Ocean 5) Asia 6) Atlantic Ocean Australia 8) Europe 9) Indian Ocean 10) Pacific Ocean 11) UTC - I want to use Coordinated Universal Time. 12) Return to previous setup step (^). #? 11

Network Time Protocol (NTP) Setup. If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time. NTP is currently disabled. Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter whether or not you would like to set up the Network Time Protocol (NTP) for this machine. If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time. Enable NTP (yes∕no) [no]: yes Enter NTP server name or address: ntp.network.local 次に、MSE Virtual Appliance Primary セットアップの要約を示します。 -----BEGIN-----Role=1, Health Monitor Interface=eth0, Direct connect interface=none Virtual IP Address=10.10.10.11, Virtual IP Netmask=255.255.255.0 Eth0 IP address=10.10.10.12, Eth0 network mask=255.0.0.0 Default Gateway=10.10.10.1 -----END------10. [YES] と入力して、すべてのセットアップ情報が正しいことを確認します。 Please verify the following setup information. -----BEGIN-----Host name=mse1 Role=1, Health Monitor Interface=eth0, Direct connect interface=none Virtual IP Address=10.10.10.11, Virtual IP Netmask=255.255.255.0 Eth0 IP address=10.10.10.12, Eth0 network mask=255.255.255.0 Default gateway=10.10.10.1 Time zone=UTC Enable NTP=yes, NTP servers=10.10.10.10 -----END------You may enter "yes" to proceed with configuration, "no" to make more changes, or "^" to go back to the previous step. Configuration Changed Is the above information correct (yes, no, or ^): yes 11. セットアップ後にリブートすることを推奨します。 [root@mse1 ~]# reboot Stopping MSE Platform

12. リブート後、**/etc/init.d/msed start**コマンドまたはservice msed startコマンドを使用して MSEサ**ービスを**開始する**ことがで**きま**す**。 [root@mse1 ~]# getserverinfo Health Monitor is not running [root@mse1 ~]# /etc/init.d/msed start Starting MSE Platform ip_tables: (C) 2000-2006 Netfilter Core Team Netfilter messages via NETLINK v0.30. ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack Starting Health Monitor, Waiting to check the status. Starting Health Monitor, Waiting to check the status. Starting Health Monitor, Waiting to check the status. Health Monitor successfully started Starting Admin process... Started Admin process. Starting database Database started successfully. Starting framework and services Framework and services successfully started

```
[root@mse1 ~]#
```

13. すべてのサービスが起動したら、getserverinfo コマンドを使用して、MSE サービスが正し く機能していることを確認します。動作ステータスは Up です。

Active Wired Clients: 0 Active Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired (lients, Tags) Limit: 100 Active Sessions: 0 Wireless Clients Not Tracked due to the limiting: 0 Fags Not Tracked due to the limiting: 0 Rogue APs Not Tracked due to the limiting: 0 Rogue Clients Not Tracked due to the limiting: 0 Interferers Not Tracked due to the limiting: 0 Wired Clients Not Tracked due to the limiting: 0 Total Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired Cl ients) Not Tracked due to the limiting: 0 Context Aware Sub Services Subservice Name: Aeroscout Tag Engine Admin Status: Disabled)peration Status: Down Subservice Name: Cisco Tag Engine admin Status: Enabled Dperation Status: Up [root@mse1 ~]#

これらの手順は、セカンダリ MSE VA のセットアップの一部です。

1. 新しいインストール後に初めてログインすると、Setup Wizard が起動します。次の内容を 入力します。ハイ アベイラビリティの設定:[Yes]ロールの選択:[2](セカンダリを示しま す)ヘルス モニタ インターフェイス:[eth0](プライマリと同じです)

Current hostname=[mse] Configure hostname? (Y)es/(S)kip/(U)se default [Yes]: yes The host name should be a unique name that can identify the device on the network. The hostname should start with a letter, end with a letter or number, and contain only letters, numbers, and dashes. Enter a host name [mse]: mse2 Current domain=[] Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s Current role=[Primary] Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]: ligh availability role for this MSE (Primary/Secondary) Select role [1 for Primary, 2 for Secondary] [1]: 2 lealth monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves Select Health Monitor Interface [eth0/eth1] [eth0]:

2. 次の内容を入力します。直接接続:[None]IP アドレス eth0:[10.10.10.13]ネットワーク マ スク:[255.255.255.0]デフォルト ゲートウェイ

: [10.10.10.1]

Select direct connect interface [eth0/eth1/none] [none]: Current IP address=[1.1.1.10] Current eth0 netmask=[255.255.255.0] Current gateway address=[1.1.1.1] Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.13 Enter the network mask for IP address 10.10.10.13. Enter network mask [255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1_ 3. eth1 インターフェイスの設定

: [Skip]

Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.13 Enter the network mask for IP address 10.10.10.13. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1 The second ethernet interface is currently disabled for this machine. Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s

4. タイム ゾーンの設定

: [UTC]

Current timezone=[America/New_York] Configure timezone? (Y)es/(S)kip/(U)se default [Yes]: Enter the current date and time. Please identify a location so that time zone rules can be set correctly. Please select a continent or ocean. 1) Africa 2) Americas 3) Antarctica 4) Arctic Ocean 5) Asia 6) Atlantic Ocean Australia 8) Europe 9) Indian Ocean 10) Pacific Ocean 11) UTC - I want to use Coordinated Universal Time. 12) Return to previous setup step (^). #? 11_

5. NTP サーバをイネーブルにします。

Network Time Protocol (NTP) Setup.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

NTP is currently disabled. Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]:

Enter whether or not you would like to set up the Network Time Protocol (NTP) for this machine.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

Enable NTP (yes/no) [no]: yes Enter NTP server name or address: ntp.network.local_ 6. Setup Wizard の残りの手順を完了し、セットアップ情報を確認して、設定を保存します。

lease verify the following setup information. -----BEGIN------Host name=mse2 Role=2, Health Monitor Interface=eth0, Direct connect interface=none Eth0 IP address=10.10.10.13, Eth0 network mask=255.255.255.0 Default gateway=10.10.10.1 Time zone=UTC Enable NTP=yes, NTP servers=10.10.10.10 ----END------You may enter "yes" to proceed with configuration, "no" to make more changes, or "^" to go back to the previous step. Configuration Changed Is the above information correct (yes, no, or ^): yes_ 7. プライマリ MSE の手順と同じように、リブートし、サービスを起動します。 [root@mse2 ~]# /etc/init.d/msed start Starting MSE Platform ip_tables: (C) 2000-2006 Netfilter Core Team Netfilter messages via NETLINK v0.30. ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack Starting Health Monitor, Waiting to check the status. Starting Health Monitor, Waiting to check the status. Health Monitor successfully started

Starting Admin process... Started Admin process. Starting database Database started successfully. Starting framework and services . Framework and services successfully started

[root@mse2 ~]#

次の手順は、プライマリおよびセカンダリ MSE VA を NCS に追加する方法を示します。通常の プロセスで、MSE を NCS に追加します。詳細については、設定ガイドを参照してください。

1. NCS から、[Systems] > [Mobility Services] に移動し、[Mobility Services Engines] を選択し ます。



2. プルダウンから、[Add Mobility Services Engine] を選択します。その後、[移動(Go)] をク リックします。

ROOT-DOMAIN root v Log Out	Q -)
•		9
	Select a command 🔻	G0
	Select a command	
	Add Location Server	
	Add Mobility Services Engine 🥄	
in the second se	Delete Service(s)	
	Synchronize Services	
	Synchronization History	
	Edit Configuration	

3. MSE の NCS 設定ウィザードを実行します。このドキュメントの例では、次の値を使用しま す。デバイス名の入力:例:[MSE1]IP アドレス:[10.10.10.12]ユーザ名およびパスワード (各初期セットアップ)[next] をクリックします。

Cisco Prime CISCO Network Control Syste		
	Add Mobility Services Engine	3
Add MSE Configuration		
Licensing	Device Name	msel
Select Service	IP Address	10.10.10.12
Tracking		
Assign Maps	Contact Name	L
	Username 🕀	admin
	Password D	•••••
	нттр⊉	Enable
	Delete synchronized service assign O Selecting Delete synchronized s Existing location history data is retained	nments 🔽 (Network designs, controllers, wired switche ervice assignments permanently removes all service a ed, however you must use manual service assignments to
使用できるすべてのライヤンス	スを追加し、[Next] をクリッ	ックします。

4. 使用できるすべてのライセンス	へを追加し、[Ne	xt] をク	リックしま	す。	
Cisco Prime Cisco Network Control Syste	em 👘				
	MSE License Su	immary			
Edit MSE Configuration	0 Permanent licen	ses includ	e installed licens	e counts and in-built lic	ense counts.
Licensing					
Select Service	MSE Name (UDI)	Service	Platform Limit	Туре	Installed Limit
Tracking	mse1 Activated	(AIR-MS	E-VA-K9:V01:r	mse1_d5972642-569	96-11e1-bd0
Assign Maps		CAS	2000	CAS Elements	100
		wIPS	2000	wIPS Monitor Mode APs	10
				wIPS Local Mode APs	10
		MSAP	2000	Service Advertisemen Clicks	^{it} 1000
	Add License	Remove	License		

5. [MSE] を選択し、[Next] をクリックします。

	cisco	Cisco Prime Network Control System	m	
			Select	Mobility Service
	Edit MSE Cor	nfiguration		
	Licensing		2	Context &ware Service
	Select Servi	ce	10	CONCERC AWAR SERVICE
	Tracking			 Cisco Context-Aware Engine for Clients and Tags
	Assign Maps			C Partner Tag Engine 🕸
				Wireless Intrusion Protection Service
				MSAP Service
6.	トラッキン	グ パラメータをイネーブ	゚ルにし⁻	て、[Next] をクリックします。
	cisco	Cisco Prime Network Control S	ystem	
			:	Select Tracking & History Parameters.
	Edit MSE G	onfiguration		
	Licensing			Tracking
	Select Serv	vice		₩ Wired Clients
	Tracking			✓ Wireless Clients
	Assign Map	s		Rogue AccessPoints
				Exclude Adhoc Rogue APs
				C Rogue Clients
				Interferers
				Active RFID Tags

7. オプションで、マップを割り当て、MSE サービスを同期化します。[Done] をクリックして 、MSE を NCS に追加します。

cisco	Cisco Prime Network Control Syste	m	
Edit MSE Cor	nfiguration		
Licensing			
Select Servic	e		Name
Tracking			
Assign Map	IS		
The page a	t https://10.10.10.20 say	s:	×
<u> </u>	our MSE Settings have been s	aved.	
	OK		

次のスクリーンショットは、プライマリ MSE VA が追加されたことを示します。ここで、セカン ダリ MSE VA を追加するために、次の手順を完了します。

1. [Secondary Server] 列で、リンクをクリックして、処理を続行します。

•1] C	Isco Network Control	System			Virtual Domain: ROOT	-DOMMAN root + Lo	+Q top		÷
6	hame Manitor 🕶 Ca	nligure • Services • Reports	 Administration 	•					
Mol Servi	oliity Services Engines es > Mability Services Engines						Select	a command	• Go
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	Name	Admin Status	Service Status
	msel	Cisco Mobility Services Engine - Virtual Appliance	10.10.10.12	7.2.103.0	Reachable	N/A (Click here to configure)	Context Aware Service wBPS Service MSAP Service	Enabled Disabled Disabled	Up Down Down

2. この例の設定を使用して、セカンダリ MSE VA を追加します。セカンダリ デバイス名 : [mse2]セカンダリ IP アドレス: [10.10.10.13]セカンダリ パスワード*: [default or from setup script]フェールオーバー タイプ*: [Automatic, or Manual]フェールバック タイプ*フェ ールオーバーの長期待機*[Save] をクリックします。*必要に応じて、情報アイコンをクリッ クするか、MSE ドキュメントを参照してください。

LIVE CONTINUE AND LEADER	HA	Cor	nfiau	urat	tion	:	mse1	
--------------------------	----	-----	-------	------	------	---	------	--

Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configure High Availability P	arameters	
Primary Health Monitor IP	10.10.10.12	
Secondary Device Name	mse2	
Secondary IP Address	10.10.13	
Secondary Password 🕸	•••••	
Failover Type 🕸	Automatic 👻	
Failback Type 🕸	Manual	
Long Failover Wait 🕸	10 seconds	
Save		

3. NCS により 2 つの MSE のペアを作成するプロンプトが表示されたら、[OK] をクリックします。

The page at https://10.10.10.20 says: 🛛 🛛 🔀						
Are you sure you want to pair up these two servers?						
OK Cancel						
 NCS で設定を作成するには、数秒かかります。						

Please Wait. High Availability configuration is being created at the Primary and Secondary servers. This will take a few seconds...

セカンダリ MSE VA でアクティブ化ライセンス(L-MSE-7.0-K9)が必要な場合、NCS によりプロンプトが表示されます。

The page at https://10.10.10.20 says:

Secondary MSE needs to be activated with a Virtual Appliance license. Add a license and save the config.

OK

X

4. [OK] をクリックして、[License File] でセカンダリをアクティブにします。

HA Configuration : mse1 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters						
Configuration						
Primary Health Monitor IP	10.10.10.12					
Secondary Device Name	mse2					
Secondary IP Address	10.10.10.13					
Secondary Password 🕸	••••					
Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050568					
Secondary Activation Status	Not Activated					
Activate Secondary with License	Browse					
Failover Type 🕸	Automatic 💌					
Failback Type 🕸	Manual 💌					
Long Failover Wait 🏵	10 seconds					

5. セカンダリ MSE VA がアクティブになったら、[Save] をクリックして、設定を完了します

Save Delete

-						
HA Configuration : mse1 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters						
Configuration						
Primary Health Monitor IP	10.10.10.12					
Secondary Device Name	mse2					
Secondary IP Address	10.10.13					
Secondary Password 🖗	•••••					
Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-005					
Secondary Activation Status	Activated					
Delete Secondary Activation license \circledast						
Failover Type 🕸	Automatic 💌					
Failback Type 🕸	Manual 💌					
Long Failover Wait 🕸	10 seconds					
Save Delete Switchover						

6. [NCS] > [Mobility Services] > [Mobility Services Engine] に移動します。セカンダリ MSE が [Secondary Server] の列に表示されると、NCS により次の画面が表示されます。

Mol Servi	bility Services Engines ac > Mobility Services Engines						- Select -	a command	GO
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	Mo	Admin Status	Service Stabus
	moe1	Cisco Mobility Services Engine - Virtual Appliance	10.10.10.11	7.2.103.0	Reachable	moo2	Context Aware Service wIPS Service MSAP Service	Enabled Disabled Disabled	Up Dawn Dawn

7. ハイ アベイラビリティ ステータスを表示するには、[NCS] > [Services] > [High Availability] に移動します。

Cisco Prime Network Control System						
💧 Home Monitor	🔻 Configure 🔻	Services 🔻 Reports 🔻 Administ	ration 🔻			
Mobility Services Eng Services > High Availability	ines	Mobility Services Mobility Services Engines Synchronize Services				
Secondary Server Name	Secondary HM IP Ad	Synchronization History High Availability Context Aware Notifications	Version			
mse2	10.10.10.13	MSAP	7.2.10			
		Identity Services				

HA ステータスで、現在のステータスおよびイベントを MSE ペアごとに確認します。

cisco Network Control System	n i la	Virtual Domains	ROOT-DOMAIN root - Log Out	ρ.
🛕 Home Monitor 🔹 Configure	▼ Services ▼ Reports ▼ Adr	ministration 🔻		
System v	HA Configuration : msc1 Services > Mobility Services Engines > System > Current High Availability Status	Services High Availability > Current High Avai	lability Status	
Active Sessions Trap Destinations Advanced Parameters Logs Services High Availability HA Configuration	Status Heartbeats Data Replication Mean Heartbeat Response Time	Active Up G millisec		
👗 HA Status	Events Log			
Accounts Lisers Groups	Event Description Active Heartbeats have been setup	Generated By Primary	Timestamp 2012-Feb-14, 00:22:26 UTC	Remarks -
 Status Server Events Audit Logs 	successfully Primary and secondary server synchronization in progress	Primary Primary	2012-Feb-14, 00:19:00 UTC 2012-Feb-14, 00:18:56 UTC	-
L NCS Alarms	Configuration successfully created Refresh Status	Primary	2012-Feb-14, 00:18:56 UTC	

初期同期化およびデータ レプリケーションのセットアップには数分かかることがあります。NCS は、上記のように HA ペアが完全にアクティブになるまで、進捗情報 % を表示します。

	Current High Availability Status		
Status		Primary and secondary server synchronization in progress	(68% complete)
	Heartbeats	Up	
	Data Replication	Setting up	
	Mean Heartbeat Response Time	108 millisec	

MSE ソフトウェア リリース 7.2 で導入された HA に関連する新しいコマンドは gethainfo です。 この出力は、プライマリおよびセカンダリを示します。

[root@mse1 ~] #gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Primary Health Monitor IP Address: 10.10.10.12 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse1 Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.13 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050568901d9 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: PRIMARY_ACTIVE

[root@mse2 ~] #gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Secondary Health Monitor IP Address: 10.10.10.13 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse2 Number of paired peers: 1 Peer configuration#: 1

Health Monitor IP Address 10.10.10.12 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse1_d5972642-5696-11e1-bd0c-0050568901d6 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

直接接続の場合の HA 設定

ネットワーク接続された MSE HA は、ネットワークを使用します。直接接続設定の場合、プライ マリおよびセカンダリ MSE サーバ間での直接ケーブル接続を簡単に使用できます。これにより 、ハートビート応答時間、データ レプリケーションおよび障害検出時間の遅延を減らすことがで きます。このシナリオでは、図5に示すように、プライマリ物理MSEがインターフェイスeth1の セカンダリMSEに接続します。直接接続にはEth1が使用されることに注意してください。各イン ターフェイスには IP アドレスが必要です。

図 5: 直接接続の MSE HA



1. プライマリ MSE をセットアップします。セットアップ スクリプトからの設定の要約:

```
-----BEGIN-----
Host name=mse3355-1
Role=1 [Primary]
Health Monitor Interface=eth0
Direct connect interface=eth1
Virtual IP Address=10.10.10.14
Virtual IP Netmask=255.255.00
Eth1 IP address=1.1.1.1
Eth1 network mask=255.0.0.0
Default Gateway =10.10.10.1
```

2. セカンダリ MSE をセットアップします。セットアップ スクリプトからの設定の要約:

-----BEGIN------Host name=mse3355-2 Role=2 [Secondary] Health Monitor Interface=eth0 Direct connect interface=eth1 Eth0 IP Address 10.10.10.16 Eth0 network mask=255.255.255.0 Default Gateway=10.10.10.1 Eth1 IP address=1.1.1.2, Eth1 network mask=255.0.0.0

3. プライマリ MSE を NCS に追加します(上記の例を参照するか、設定ガイドを参照してく ださい)。

Cisco Prime Network Control System Virtual Domain: ROOT-DOM							oot v Log Out
	6	Home Monitor 🔻	Configure 🔻 Services 🔻 F	Reports 🔻 Ad	ministration	•	
	Mob Servic	vility Services Engines es > Mobility Services Engines	5				[
		Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
		mse3355-1	Cisco 3355 Mobility Services Engine	10.10.10.14	7.2.103.0	Reachable	N/A (Click here to configure)

 Secondary MSE from NCS] > [configure Secondary Server] をセットアップします。セカン ダリ デバイス名の入力: [mse3355-2]セカンダリ IP アドレス: [10.10.10.16]残りのパラメー タを完了して、[Save] をクリックします。

Cisco Prime Cisco Network Control Syst	em A	Virtual Domain: ROO
🛕 Home Monitor 🔻 Configur	re 🔻 Services 🔻 Repor	ts 🔻 Administration 🔻
System 🗸	HA Configuration : ms Services > Mobility Services Engi	SC3355–1 nes > System > Services High Availat
General Properties Active Sessions	Configure High Availability	/ Parameters
Trap Destinations	Primary Health Monitor IP	10.10.10.15
指 Advanced Parameters	Secondary Device Name	mse3355-2
 Logs Services High Availability 	Secondary IP Address	10.10.10.16
HA Configuration	Secondary Password 🕸	••••
 Accounts 	Failover Type 🕸	Manual
Users	Failback Type 🕸	Manual 💌
 Status 	Long Failover Wait 🕸	10 seconds
Server Events Audit Loas	Save	
OK] をクリックして、2 つの MSE 0	Dペアを確認します。	

The page at https://10.10.10.20 says:	×				
Are you sure you want to pair up these two servers?					
OK Cancel					
NCS でセカンダリ サーバ設定を追加するには時間がかかりま	व 。				
Please Wait. High Availability configuration is being created at the Primary and Second seconds	dary servers. This will take a few				
• • • •					

6. 完了したら、HA パラメータを変更します。[Save] をクリックします。

HA Configuration : mse3355-1 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration

_		
Primary Health Monitor IP	10.10.10.15	
Secondary Device Name	mse3355-2	
Secondary IP Address	10.10.10.16	
Secondary Password 🕸	•••••	
Secondary Platform UDI	AIR-MSE-3355-K9:V01:K0	
Failover Type 🕸	Manual	
Failback Type 🕸	Manual	
Long Failover Wait 🔍	10 seconds	
Save Delete Switchover		

7. HA ステータスを参照して、新しい MSE HA ペアのリアルタイム進捗情報を確認します。

CISCO Network Control System	m 20 37	Virtual Domain: ROOT-DOMAIN	root v Log Out Pv	÷	
🛕 Home Monitor 🔻 Configure	🔹 🔹 Services 🔻 Reports 🔻	Administration 🔻		- 🚸 💷 😣	
System 🗸	HA Configuration : mse33 Service: > Mobility Service: Engine: > S Current High Availability Status	55–1 ystem > Services High Availability > Cen	rent High Availability Status		
Active Sessions Trap Destinations Advanced Parameters Logs Services High Availability HA Configuration	Status Primary and secondary server synchronization in progress (66% complete) Heartbeats Up Data Replication Setting up Mean Heartbeat Response Time 8 millisec				
ᡖ HA Status	Events Log				
Accounts Accounts Broups	Event Description Configuration updated	Generated By Primary	Timestamp 2012-Feb-15, 20:10:56 UTC	Remarks Fallover mode set to AUTOMATIC.	
Status Server Events Server Events	Heartbeats have been setup successfully Primary and secondary server	Primary	2012-Feb-15, 20:10:11 UTC	-	
Accile Logs	synchronization in progress Configuration successfully created	Primary	2012-Feb-15, 20:10:09 UTC		
NMSP Connection Status	Refresh Status				

8. [NCS] > [Services] > [Mobility Services] > [Mobility Services Engines] から、MSE(直接接続) HA が NCS に追加されたことを確認します。

·1	ISCO Prime Network Contr	rol System		Virtual Domain:	ROOT-DOMAIN	oot + Log Out
4	🖌 Home Monitor 🔻	Configure 🔻 Services 🔻 I	Reports 🔻 Ad	ministration	•	Change Password
Mol Servic	bility Services Engines as > Mobility Services Engine	s				[
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
	mse3355-1	Cisco 3355 Mobility Services Engine	10.10.10.14	7.2.103.0	Reachable	mse3355-2

9. コンソールから、gethainfo コマンドを使用して確認することもできます。次に、プライマ リおよびセカンダリの出力を示します。 [root@mse3355-1~]#gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Primary Health Monitor IP Address: 10.10.10.15 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ37xx Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.16 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Failover type: Automatic Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: Yes Heartbeat status: Up Current state: PRIMARY_ACTIVE

[root@mse3355-2 ~]#gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 1

Peer configuration#: 1

```
Health Monitor IP Address 10.10.10.15
Virtual IP Address: 10.10.10.14
Version: 7.2.103.0
UDI: AIR-MSE-3355-K9:V01:KQ37xx
Failover type: Automatic
Failback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: Yes
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

MSE 物理アプライアンス用の HA 設定シナリオ

ペアマトリクスに基づき、HA設定の最大値は2:1です。これは、セカンダリモードでMSE-3310お よびMSE-3350をサポートできるMSE-3355用に予約されています。このシナリオでは、直接接続 は利用できません。



1. これらの各 MSE を設定して、2:1 HA シナリオを示します。

MSE-3310 (Primary1) Server role: Primary Health Monitor IP Address (Eth0): 10.10.10.17 Virtual IP Address: 10.10.10.18 Eth1 - Not Applicable

MSE-3350 (Primary2) Server role: Primary Health Monitor IP Address: 10.10.10.22 Virtual IP Address: 10.10.10.21 Eth1 - Not Applicable

MSE-3355 (Secondary) Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary

2. すべての MSE が設定されたら、Primary1 および Primary2 を NCS に追加します。

cisco Retwork Control Sys	Cisco Prime Cisco Network Control System Vitual Domain: ROOT-DOMAIN Vitual Domain: ROOT-DOMAIN								
🛕 Home Monitor 🔹 Config	ure 🔻 Services 🔻 Reports 🔻 Admini	stration 🔻							
Mobility Services Engines Services > Mobility Services Engines									
Device Name	Device Type	IP Address Version	Reachability Status	Secondary Server					
•									
nse3350	Osco 3350 Mobility Services Engine	10.10.10.21 7.2.103	.0 Readhable	N/A (Click here to configure)					
• 🚥									
nse3310	Osco 3310 Mobility Services Engine	10.10.10.18 7.2.103	.0 Readhable	N/A (Click here to configure)					

3. クリックして、セカンダリ サーバを設定します(上記の例を参照してください)。 いずれ かのプライマリ MSE から開始します。

Reachability Status	Secondary Server
Reachable	N/A (Click <mark>here</mark> to configure)
Reachable	N/A (Click <u>here to</u> configure)

4. セカンダリ MSE のパラメータを入力します。セカンダリ デバイス名:例:[mse-3355-2]セ カンダリ IP アドレス:[10.10.10.16]残りのパラメータを完了します。[Save] をクリックし ます。

HA Configuration : mse3350 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters					
Configuration					
Primary Health Monitor IP	10.10.10.22				
Secondary Device Name	mse3355-2				
Secondary IP Address	10.10.10.16				
Secondary Password 🔍	•••••				
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ4				
Failover Type 🕸	Manual 💌				
Failback Type 🕸	Manual 💌				
Long Failover Wait 🕸	10 seconds				
Save Delete Switchow	er				

5. 最初のセカンダリ エントリが設定されるまで、しばらく待ちます。



6. 最初のプライマリ MSE のセカンダリ サーバが追加されたことを確認します。

Mobility Services Engines Services > Mobility Services Engines					
Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
P. cames					
🗆 mse3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2

7. セカンド プライマリ MSE で手順3~6を繰り返します。

Mob Servic	ility Services Engines 13 > Mobility Services Engines					
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
÷						
	mse3350	Osco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2
	mse3310	Osco 3310 Mobility Services Engine	10.10.10.10	7.2.103.0	Reachable	N/A (Click bare to configure)
_						

8. セカンド プライマリ MSE の HA パラメータを完了します。

HA Configuration : mse3310	
Services > Mobility Services Engines > System > Services High	Availability > Configure High Availability Parameters

Configure High Availability Parameters				
Primary Health Monitor IP	10.10.10.17			
Secondary Device Name	mse3355-2			
Secondary IP Address	10.10.10.16			
Secondary Password 🕸	••••			
Failover Type 🕸	Manual 💌			
Failback Type 🕸	Manual 💌			
Long Failover Wait 🕸	10 seconds			
Save				

9. 設定を保存します。

HA Configuration : mse3310 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration		
Primary Health Monitor IP	10.10.10.17	
Secondary Device Name	mse3355-2	
Secondary IP Address	10.10.10.16	
Secondary Password 🕸	•••••	
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ	
Failover Type 🕸	Manual	
Failback Type 🕸	Manual	
Long Failover Wait 🕸	10 seconds	
Save Delete Switchove	er	

10. 各プライマリ MSE のプロセスのステータスを確認します。

cisco Prime Cisco Network Control Syst	em All			Virtual Domain: ROOT-DOMAIN root +	Log C
🔺 Home Monitor 🔻 Configu	re 🔻 Services 🔻 Reports 🔻	Administratio	an ¥		
System v	HA Configuration : mse3310 Service > Mobility Service Engines > Syste Current High Availability Status	ım > Services H	igh Availability > Current High Availability Status		
Accelere Sessions Trap Destinations Advanced Parameters Logs Consider Links Ausliability	Status Heartbeats Data Replication	Primary and s Up Setting up	secondary server synchronization in progress	(60% complete)	
HA Configuration	Mean Heartbeat Response Time	8 millisec			
 Accounts 	Event Decription		Conversional De	Timartano	_
🖥 Users	Heartbeats have been setup succe	astuly	Primary	2012-Feb-17, 20:54:36 UTC	
 Groups Status 	Primary and secondary server synch in progress	vonization	Primary	2012-Feb-17, 20:54:32 UTC	
Audit Logs	Configuration successfully created Refresh Status		Primary	2012-Feb-17, 20:54:32 UTC	

11. Primary1 および Primary2 の両方の MSE がセカンダリ MSE でセットアップされていることを確認します。

Mot Servis	oliity Services Engines as > Mobility Services Engines					
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
	mse3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2
	mse3310	Cisco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	mse3355-2

12. [NCS] > [Services] > [Mobility Services] から、[High Availability] を選択します。



MSE-3310 および MSE-3350 のセカンダリとして MSE-3355 が設定されているため、2:1

	0					
cisco Network	e Control System	Web	ual Domain: RC	OT-DOMAIN root +	Log Out	
🛕 Home Monitor	▼ Configure ▼ Serv	ices 🔻 Reports 🔻 Admi	inistration 🔻			
Mobility Services Eng Services > High Availability	jines					
			Version	Associated Primary Mobility Service Engines		
Secondary Server Name	Secondary HM IP Address	Secondary Device Type		Device Name	Device Type	Heartbeats
		A CONTRACTOR			Applance	
		Osco 3355 Mobility Services	7.2.103.0	mse3310	Cisco 3310 Mobility Services Engine	Up
1063333-5	10, 10, 10, 10	Engine		mse3350	Cisco 3350 Mobility Services Engine	Up

次に、gethainfo コマンドが使用されたときのすべての 3 つの MSE のコンソールからの HA セットアップの出力例を示します。

[root@mse3355-2 ~] #gethainfo

を確認できます

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 2

Peer configuration#: 1

Health Monitor IP Address 10.10.10.22 Virtual IP Address: 10.10.10.21 Version: 7.2.103.0 UDI: AIR-MSE-3350-K9:V01:MXQ839xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

Peer configuration#: 2

Health Monitor IP Address 10.10.10.17 Virtual IP Address: 10.10.10.18 Version: 7.2.103.0 UDI: AIR-MSE-3310-K9:V01:FTX140xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos4 Instance database port: 1525 Dataguard configuration name: dg_mse4 Primary database alias: mseop4s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

NCS の HA の最後の確認では、MSE-3310 と MSE-3350 の両方のステータスがアクティブ であることが示されます。

cisco Prime Network Control System						
💧 Home Monitor 🔻 Configure	🔹 🔻 Services 🔻 Reports 🔻 Administra	ation 🔻				
System 🗸	HA Configuration : mse3310 Services > Mobility Services Engines > System > Services High Availability > Current High Availability Status					
and General Properties	Ourrent Hide Availability Status					
Active Sessions	Charles Action					
Trap Destinations	status Active					
 Advanced Parameters Loos 	Heartbeats Up					
 Services High &valability 	Data Replication	Up				
HA Configuration	Mean Heartbeat Response Time 5 millisec					
ដ HA Status	Events Log					
▼ Accounts	Event Description	Generated By				
Users	Active	Primary				
Groups	Heartbeats have been setup successfully	Primary				
 Status Server Events 	Primary and secondary server synchronization	Primary				
📥 Audit Logs	Configuration successfully created	Primary				
uluulu. Cisco Prime						
CISCO Network Control System						
🛕 Home Monitor 🔻 Configure	▼ Services ▼ Reports ▼ Administration	n 🔻				
System 🗸	System HA Configuration : mse3350 Services > Mobility Services Engines > System > Services High Availability > Current High Availability Status					
E General Properties	Le General Properties					
Active Sessions	Status	áctive				
Advanced Parameters	Heatheats	lb				
Logs	Data Replication	Up				
 Services High Availability 	Mean Heartbeat Response Time	4 milisec				
HA Configuration						
HA Status	Events Log					
Accounts Users	Event Description	Generated By				
💑 Groups	Active	Primary				
▼ Status	Heartbeats have been setup successfully	Primary				
Server Events	in progress	Primary				
Audit Logs	Configuration successfully created	Primary				

MSE HA の基本的なトラブルシューティング

セカンダリ MSE を追加すると、次のようにプロンプトが表示されます。



Cannot use high availability. Health monitor IP address has not yet been configured for this server. Configure one and try again.



セットアップ スクリプト中に問題が発生した可能性があります。

- getserverinfo コマンドを実行して、ネットワーク設定が正しいことを確認します。
- また、サービスが起動していない可能性もあります。/init.d/msed start コマンドを実行します。
- 必要な場合、セットアップスクリプト(/mse/setup/setup.sh)を再実行して、最後に保存します。

MSE の仮想アプライアンスでは、アクティブ化ライセンス(L-MSE-7.0-K9)が必要です。 ライ センスがない場合、セカンダリ MSE VA を追加するときに NCS によりプロンプトが表示されま す。MSE VA のアクティブ化ライセンスを取得および追加します。

The page	e at https://10.10.10.20 says:	×
	Secondary MSE needs to be activated with a Virtual Appliance license. Add a license and save the config.	
	OK	

MSE で HA ロールを切り替える場合、サービスが完全に停止していることを確認します。そのため、/init.d/msed stop コマンドでサービスを停止して、セットアップ スクリプト (/mse/setup/setup.sh)を再実行します。

Applying High Availability configuration *** User has switched roles for this MSE. MSE must be stopped before switching oles. *** Please stop MSE and then re-run setup.sh. ERROR: One or more of the requested configurations was not applied. Role=2, Health Monitor Interface=eth0, Direct connect interface=none Success [root0mse2_setup]#

gethainfo コマンドを使用して、MSE の*ハイ アベイラビリティ情報を取得*します。これは、HA ステータスおよび変更のトラブルシューティングまたはモニタに役に立つ情報を提供します。

[root@mse3355-2 ~]#gethainfo

Health Monitor is running. Retrieving HA related information

```
Base high availability configuration for this server
```

Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 2

Peer configuration#: 1

Health Monitor IP Address 10.10.10.22 Virtual IP Address: 10.10.10.21 Version: 7.2.103.0 UDI: AIR-MSE-3350-K9:V01:MXQ839xx Failover type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

Peer configuration#: 2

Health Monitor IP Address 10.10.10.17 Virtual IP Address: 10.10.10.18 Version: 7.2.103.0 UDI: AIR-MSE-3310-K9:V01:FTX140xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos4 Instance database port: 1525 Dataguard configuration name: dg_mse4 Primary database alias: mseop4s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

また、NCS High Availability View は、MSE の HA セットアップを表示できる優れた管理ツールです。

Cisco Prime Cisco Network Control System			Virtual Domain: ROOT-DOMAIN root + Log O		
🛕 Home Monitor 🔻 Configure	▼ Services ▼ Reports ▼ Administratio	n •			
System	ystem HA Configuration : mse3310 Services > Mobility Services Engines > System > Services High Availability > Corrent High Availability Status General Properties Ourrent High Availability Status				
 Trap Destinations Advanced Parameters Logs Services High Availability HA Configuration 	Status Primary and s Heartbeats Up Data Replication Setting up Mean Heartbeat Response Time 8 millisec	econdary server synchronization in progress (6	0% complete)		
🎳 HA Status	Events Log				
Accounts Users	Event Description Heartbeats have been setup successfully	Generated By Primary	Timestamp 2012-Feb-17, 20:54:36 UTC		
 Groups Status 	Primary and secondary server synchronization in progress	Primary	2012-Feb-17, 20:54:32 UTC		
Server Events Audit Logs Audit Logs	Configuration successfully created Refresh Status	Primary	2012-Feb-17, 20:54:32 UTC		

関連情報

- <u>MSE 設定ガイド(仮想および物理アプライアンス)</u>
- MSE ハイ アベイラビリティ設定
- ・<u>ご注文</u>
- ・ <u>テクニカル サポートとドキュメント Cisco Systems</u>