SG350X, Sx550X: Não é possível alterar as configurações da porta XG em um switch

Data de identificação

30 de março de 2016

Data de resolução

N/A

Produtos afetados

Modelo	Versão do firmware	Entrada Fixa		
S G 3 5 0 X , Sx550X	2.2.0.x	2.3.0.13 0		

Descrição do problema

A configuração da porta XG não pode ser alterada para desativar a negociação e definir a velocidade ao mesmo tempo através do utilitário baseado na Web do switch.

Resolução

Atualize o firmware do switch para a versão mais recente. Para obter instruções, clique aqui.

Solução

Se não quiser atualizar o firmware do switch por algum motivo, você pode executar a seguinte solução:

Etapa 1. Faça login no utilitário baseado na Web do seu switch. O nome do usuário e a senha padrão são cisco/cisco.

Note: Se você já tiver alterado a senha ou criado uma nova conta, insira suas novas credenciais.



Etapa 2. Escolha **Port Management > Port Settings**.



Etapa 3. Na Tabela de configurações de porta, clique no botão de opção que corresponde à porta que você deseja configurar e clique em **Editar**.

Port Settings Table									
Filte	Filter: Interface Type equals to Port of Unit 1 🛊 Go								
	Entry No.	Port	Description	Port Type	Operational Status	Port Speed	Duplex Mode	LAG	Protection State
\bigcirc	1	XG1		10G-Copper	Down				Unprotected
$\ \boxed{}$	2	XG2		10G-Copper	Up	10G	Full		Unprotected
\circ	3	XG3		10G-Copper	Up	10G	Full		Unprotected
\circ	4	XG4		10G-Copper	Down				Unprotected
\circ	5	XG5		10G-Copper	Down				Unprotected
\circ	6	XG6		10G-Copper	Down				Unprotected
\circ	7	XG7		10G-Copper	Down				Unprotected
\circ	8	XG8		10G-Copper	Down				Unprotected
\circ	9	XG9		10G-FiberOptics	Down				Unprotected
\circ	10	XG10		10G-FiberOptics	Down				Unprotected
\circ	11	XG11		10G-FiberOptics	Down				Unprotected
\circ	12	XG12		10G-FiberOptics	Down				Unprotected
$ \circ $	13	XG13		10G-FiberOptics	Down				Unprotected
\circ	14	XG14		10G-FiberOptics	Down				Unprotected
	15	XG15		10G-FiberOptics	Down				Unprotected
\bigcirc	16	XG16		10G-FiberOptics	Down				Unprotected
\bigcirc	17	OOB		1000M-Copper	Up	1000M	Full	N/A	N/A
	Copy Sett	ings	Edit						

Note: Neste exemplo, XG2 é escolhido.

Etapa 4. Desmarque a caixa de seleção **Habilitar** negociação automática para desabilitar a negociação automática e clique em **Aplicar**.

Auto Negotiation:	Enable	Operational Auto Negotiation:	Enabled
Administrative Port Speed:	 100M 1000M 10G 	Operational Port Speed:	10G
Auto Advertisement:	 Max Capability 1000 Full 100 Full 10000 Full 	Operational Advertisement:	Max Capability
Preference Mode:	Slave Master		
Neighbor Advertisement:	100 Full 1000 Full 10000 Full		
Flow Control:	 Enable Disable Auto Negotiation 		
MDI/MDIX:	MDIX MDI • Auto	Operational MDI/MDIX:	MDIX
Protected Port:	Enable		
		Member in LAG:	
Apply Close			

Etapa 5. Clique na velocidade da porta na área Velocidade da porta administrativa.



Note: Neste exemplo, 1000M é escolhido.

Etapa 6. Clique em Aplicar e, em seguida, clique em Fechar.

Auto Negotiation:	Enable	Operational Auto Negotiation:				
Administrative Port Speed:	 100M 1000M 10G 	Operational Port Speed:				
Auto Advertisement:	 Max Capability 1000 Full 100 Full 10000 Full 	Operational Advertisement: Unknown				
Preference Mode:	Slave Master					
Neighbor Advertisement:	Unknown					
Flow Control:	 Enable Disable Auto Negotiation 					
MDI/MDIX:	MDIX MDI • Auto	Operational MDI/MDIX:				
Protected Port:	Enable					
		Member in LAG:				
Apply Close						

Passo 7. (Opcional) Clique no botão **Salvar** para salvar as configurações no arquivo de configuração de inicialização.

Save cisco Language: English ≎ F8T 16-Port 10G Stackable Managed Switch									
Port Settings									
Jumbo Frames: Enable Jumbo frames configuration changes will take effect after saving the configuration and rebooting the switch. Apply Cancel Part Settings Table									
Filter: Interface Type equals to Port of Unit 1 🛊 Go									
	Entry No.	Port	Description	Port Type	Operational Status	Port Speed	Duplex Mode	LAG	Protection State
\bigcirc	1	XG1		10G-Copper	Down				Unprotected
\bigcirc	2	XG2		10G-Copper	Up	1000M	Full		Unprotected
\bigcirc	3	XG3		10G-Copper	Up	10G	Full		Unprotected
\bigcirc	4	XG4		10G-Copper	Down				Unprotected

Agora você deve ter desativado com êxito a negociação automática e alterado a configuração de velocidade da porta por meio do utilitário baseado na Web do switch.