为模拟电话(ATA 190)配置PLAR并对其进行故障 排除

目录

<u>简介</u> <u>先决条件</u> <u>要使 背配 网配 验</u> <u>要 用 景 置 络 置</u> <u>强 图</u> <u>验</u> 障 排除

简介

本文档介绍如何在Cisco Unified Communication Manager解决方案(CUCM)中配置和排除Cisco模拟 电话适配器(ATA)190的公共线路自动振铃(PLAR)故障。

作者:Sachin Kalekar,思科TAC工程师。

先决条件

要求

Cisco 建议您了解以下主题:

- ATA基本配置
- CUCM基本配置

使用的组件

- 思科统一通信管理器11.5.1.12018-1
- ATA 190版本ATA190.1-2-2-003

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原 始(默认)配置。如果您使用的是真实网络,请确保您已经了解所有命令的潜在影响。

背景信息

Cisco ATA 190系列模拟电话适配器是基于标准的通信设备,可将传统电话和传真通信设备转换为 IP设备。适配器从您的网络进行管理,并满足从云连接到企业网络、小型办公室或IP语音(VoIP)服 务的用户的需求。 ATA 190是会话发起协议(SIP)设备。PLAR是ATA设备的常见功能。

PLAR是一项功能,在摘机后将呼叫发送到一个预配置的分机,称为热拨号配置。

配置

网络图



配置

步骤1.输入值PT-Hotdial以创建新分区。

- Partition Info	ormation	
	Sination	
Name*	PT-Hotdial	
Description	PT-Hotdial	
Time Schedule	e < None > ▼	
Time Zone	Originating Device	
	Specific Time Zone (GMT) Etc/GMT	•
Save Del	elete Reset Apply Config Add New	

步骤2.输入新的呼叫搜索空间(CSS)值**CSS-Hotdial**,并在**CSS-Hotdial**中添**加分区PT-Hotdial**,如图 所示:

Calling Search Space Information		
Name*	CSS-Hotdial	
Description		

Route Partitions for this Calling Search Space-

**		
Available Partitions**	Directory URI	*
	Global Learned E164 Numbers	=
	Global Learned E164 Patterns	_
	Global Learned Enterprise Numbers	
	Global Learned Enterprise Patterns	-
	~~	
Salacted Dartitions		
Selected Partitions	PI-Hotalal	^
		~
		•
		*
Save Delete	Copy Add New	

步骤3.使用空白模式创建新的转换模式。

Pattern Definition		
Translation Pattern		
Partition	PT-Hotdial	-
Description		
Numbering Plan	< None >	r
Route Filter	< None >	r
MLPP Precedence *	Default •	·
Resource Priority Namespace Network Domain	< None >	·
Route Class*	Default •	·
Calling Search Space	CSS-Hotdial -	·
Use Originator's Calling Search Space		
External Call Control Profile	< None >	r
Route Option	Route this pattern A second seco	
	Block this pattern No Error	
✓ Provide Outside Dial Tone		

Urgent Priority

如图所示,将被叫方转**换掩码保**留为目标编号。

-Called Party Transformation	15	
Discard Digits	< None >	•
Called Party Transform Mask	7777	
Prefix Digits (Outgoing Calls)		
Called Party Number Type*	Cisco CallManager 🗸 🗸	
Called Party Numbering Plan*	Cisco CallManager 🔹	
Save Delete Copy	Add New	

步骤4.要使用PLAR/热拨号配置,您必须创建SIP拨号规则。

在Cisco Unified Communications Manager Administration中,导航至**Call Routing > Dial Rules >** SIP Dial Rules。

System 🔻	Cal	Routing Vedia Resources V	Adva	anced Features Device Application User Management Bulk Administration Help
Find and		AAR Group		
占 Add N		Dial Rules	۲	Application Dial Rules
		Route Filter		Directory Lookup Dial Rules
Status —		Route/Hunt	•	SIP Dial Rules
i) 3 red		SIP Route Pattern	Т	
<u> </u>		Class of Control	▸╞	
Translat		Intercom	•	

现在**添加新**,在**拨号模式**下选择7940_7960_OTHER,然后单击下一步,如图所示:

SIP Dial Rule Configuration
Next
Status
i Status: Ready
SIP Dial Rule Information
Dial Pattern* 7940_7960_OTHER
Next

输入模式的名称,然后单击**保存**。 例如,PLAR,如图所示:

SIP Dial Rule Configuration
Save
Status
i Status: Ready
SIP Dial Rule Information
Name* PLAR
Description Hotline Configuration
Dial Pattern 7940_7960_OTHER
Save
加图斫示 键入说明 然后单击"Δdd Plar(添 加图标)" 然后单击 Save(保 存).
-Pattern Addition
Pattern Description ATA Add Plar
Save Delete Reset Apply Config Add New
Status
i Status: Ready
-SIP Dial Rule Information
Name* PLAR Description
Dial Pattern 7940_7960_OTHER
-Pattern Information
ATA Pattern v Add Vade Doctor Parameter Delete Selected
-Pattern Addition
Pattern Description Add Pattern Add Plar
Save Delete Reset Apply Config Add New

注意:确保不要在"值"下键**入任何**。 它必须为空,在"拨号参数"下必须为"模式"

步骤5.在ATA设备上分配SIP拨号规则和CSS。

•在ATA设备上分配CSS(DN — 线路CSS)

- Directory Number Inform	ation	
Directory Number Inform	ación	
Directory Number*	3010	Urgent Priority
Route Partition	PT-CUG	▼
Description	Phone B	
Alerting Name	Phone B	
ASCII Alerting Name	Phone B	
External Call Control Profile	< None >	•
Associated Devices	ATA34DBFD180825	Edit Device Edit Line Appearance
	**	
Dissociate Devices		·
Directory Number Setting	15	
	,-	
Voice Mail Profile	< None >	 (Choose <none> to use system default)</none>
Calling Search Space	CSS-Hotdial	\checkmark
BLF Presence Group*	Standard Presence group	▼

•在设备配置页面上分配SP拨号规则。

I	 Protocol Specific Information — 		
	Packet Capture Mode*	None	•
	Packet Capture Duration	0	
	BLF Presence Group*	Standard Presence group	•
	SIP Dial Rules	PLAR	•
	MTP Preferred Originating $Codec^*$	711ulaw	•
	Device Security Profile*	Cisco ATA 190 - Standard SIP Non-Secure Profile	•
1		[

验证

在连接到ATA的模拟电话上摘机,您应该能够看到目的电话正在振铃。您还应该听到模拟电话的回 铃音。

故障排除

- 检查PLAR配置支持的ATA固件。
- •检查已注册的ATA设备和DN发送/接收呼叫。
- •如果PLAR仍不工作,请从电话配置页面删除SIP拨号规则并重新分配相同的规则。