



Cisco DCNM REST API Guide, Release 11.5(3)

Cisco DCNM REST APIs	2
Getting Started	2
Viewing REST APIs in DCNM	3
Viewing REST APIs on DevNet	6
Using GET APIs	6
REST API Tool	9

Revised: July 22, 2022

Cisco DCNM REST APIs

Getting Started

Cisco DCNM provides REST APIs that allow third parties to test and develop application software. The REST API documentation is packaged with Cisco DCNM, and you can access it through any browser.

Accessing the DCNM REST API documentation involves the following steps:

Procedure

- Step 1** Log in to your Cisco DCNM Web Client.
- Step 2** Go to the URL: <https://DCNM-IP/api-docs>.
- Step 3** Choose the definition from the **Select a definition** drop-down list.

The valid options are:


- **DCNM**
- **elasticservice**
- **Endpoint Locator**

The default option is **DCNM**.

Note The **Endpoint Locator** option and the **elasticservice** option appear only in the LAN Fabric deployments.

The following figure shows an example DCNM REST API documentation.

Figure 1: Example Cisco DCNM REST API Documentation

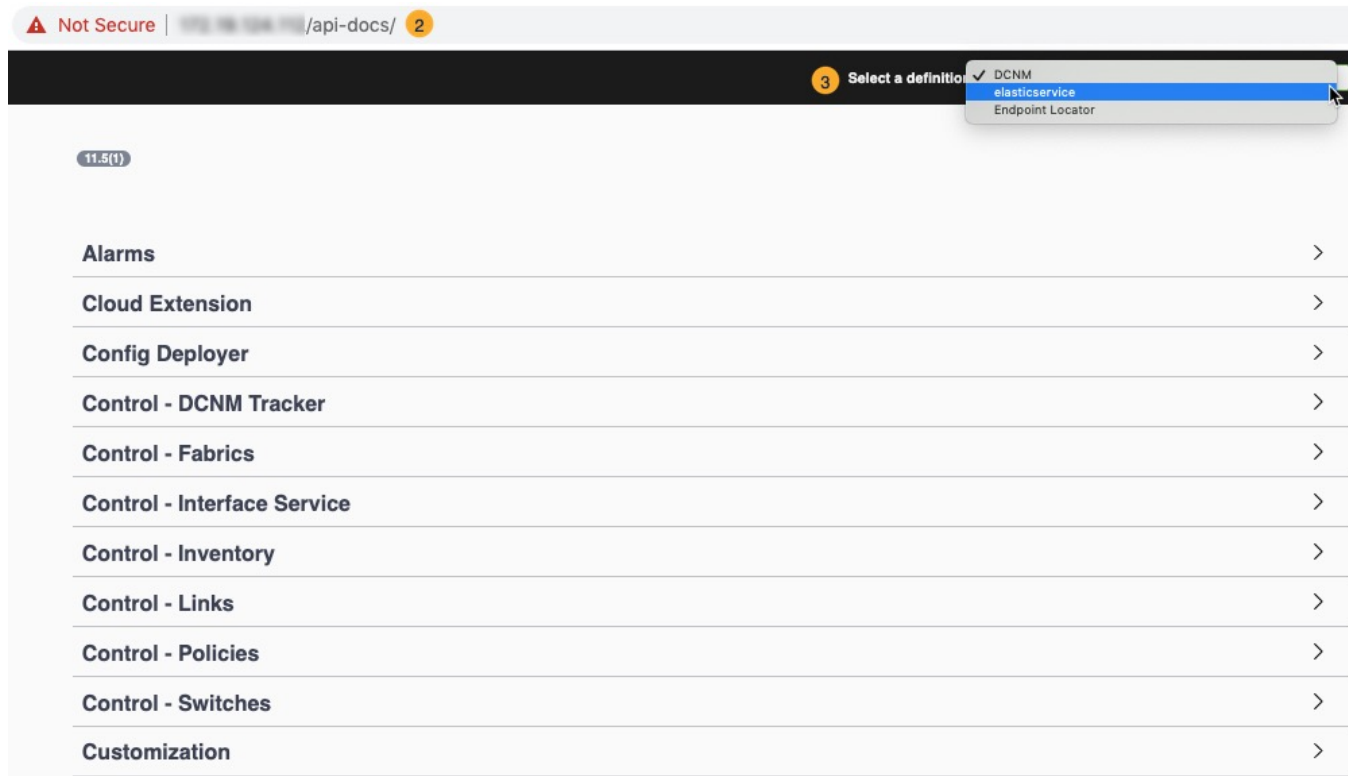

What to do next

Expand the APIs from the API categories and use them according to the task you want to perform.

Viewing REST APIs in DCNM

Launch <https://DCNM-IP/api-docs>.

API Categories	LAN Fabric	Media Controller	SAN Management
Alarms	Yes	Yes	Yes
Cloud Extension	Yes	–	–
Config Deployer	Yes	–	–
Control - DCNM Tracker	Yes	–	–
Control - Fabrics	Yes	–	–
Control - Interface Service	Yes	–	–
Control - Inventory	Yes	–	–

API Categories	LAN Fabric	Media Controller	SAN Management
Control - Links	Yes	–	–
Control - Policies	Yes	–	–
Control - Switches	Yes	–	–
Customization	Yes	Yes	Yes
DCNM Config Backup and Restore	Yes	–	–
DCNM Connect	–	–	Yes
DCNM Discovery	–	–	Yes
DCNM EPLD Image Management	Yes	–	–
DCNM Image Policy Management	Yes	–	–
DCNM Inventory	Yes	Yes	Yes
DCNM Package Management	Yes	–	Yes
DCNM Performance	–	–	Yes
DCNM PMN Discovered Hosts	–	Yes	–
DCNM PMN Events Management	–	Yes	–
DCNM PMN Flow Alias Management	–	Yes	–
DCNM PMN Flow Policy Management	–	Yes	–
DCNM PMN Flow Status	–	Yes	–
DCNM PMN Global Settings	–	Yes	–
DCNM PMN Host Alias Management	–	Yes	–
DCNM PMN Host Policy Management	–	Yes	–
DCNM PMN Multicast NAT Border Routers	–	Yes	–
DCNM PMN Multicast NAT Egress Interface Mappings	–	Yes	–

API Categories	LAN Fabric	Media Controller	SAN Management
DCNM PMN Multicast NAT Modes	–	Yes	–
DCNM PMN Multicast NAT Rules	–	Yes	–
DCNM PMN RTP Service	–	Yes	–
DCNM PMN Static Receiver Management	–	Yes	–
DCNM PMN Topology Management	–	Yes	–
DCNM PTP Management	Yes	Yes	–
DCNM Session management	Yes	Yes	Yes
DCNM Storage	–	–	Yes
DCNM Templates	Yes	Yes	Yes
Image Management	Yes	Yes	Yes
Local Zones	–	–	Yes
Progress Tracker	Yes	–	–
Resource Manager operations	Yes	–	–
Service Network Operations	Yes	–	–
Telemetry	Yes	Yes	Yes
Top Down LAN Network Operations	Yes	–	–
Top Down LAN Network Operations v2	Yes	–	–
Top Down LAN VRF Operations	Yes	–	–
Top Down LAN VRF Operations V2	Yes	–	–

Click **Show/Hide** corresponding to the API category. Alternatively, click on any category link to expand or collapse it. When you expand the category, you can see the corresponding APIs under it. The following figure shows the APIs in the DCNM Inventory category.

Figure 2: APIs in the DCNM Inventory Category



There are four types of API methods:

- GET: Fetch existing information or data from the DCNM server.
- POST: Create new information or data.
- DELETE: Delete existing information or data.
- PUT: Update existing information or data.

Viewing REST APIs on DevNet

You can view all the REST APIs listed in the DCNM on DevNet as well. For more information, see <https://developer.cisco.com/docs/data-center-network-manager/>.

Using GET APIs

To use a GET API in Cisco DCNM Web UI, perform the following steps:

Procedure

- Step 1** Click the GET API you want to try out.
The API section expands and you can view the details of the API.
- Step 2** Click **Try it out**.

Control - Inventory

GET /control/fabrics/{fabricName}/inventory List the device(s) under the fabric **1** Click the API to expand.

Parameters **2** Try it out

Name	Description
fabricName * required string (path)	<input type="text"/>

Responses Response content type

Code	Description
default	successful operation

Step 3 Enter the values under the **Parameters** area.

Step 4 Click **Execute**.

You can view the response body and response headers under the **Responses** area.

Step 5 (Optional) Click **Download** to download the response body.

GET /control/fabrics/{fabricName}/inventory List the device(s) under the fabric

Parameters Cancel

Name	Description
fabricName * required string (path)	<input type="text" value="easy"/> 3

4

Responses Response content type

Curl

```
curl -X GET "https://10.107.107.100/rest/control/fabrics/easy/inventory" -H "accept: application/json"
```

Request URL

```
https://10.107.107.100/rest/control/fabrics/easy/inventory
```

Server response

Code Details

200

Response body

```

"vdcMac": null,
"fcceEnabled": false,
"cpuUsage": 31,
"memoryUsage": 49,
"scope": null,
"fez": false,
"health": 98,
"npwEnabled": false,
"linkName": null,
"username": "G773RS4+/YajME0iSKLog==",
"primaryIP": null,
"primarySwitchDbID": 0,
"secondaryIP": "",
"secondarySwitchDbID": 0,
"switchRole": "leaf",
"modules": null,
"fezMap": {},
"isVpcConfigured": false,
"vpcDomain": 0,
"role": null,
"peer": null,
"peerSwitchDbID": 0,
"peerlinkState": null,
"keepAliveState": null,
"consistencyState": false,
"sendIntf": null,
"recvIntf": null
}

```

Response headers

```

cache-control: no-store
content-encoding: gzip
content-security-policy: default-src https;connect-src https;wss;font-src https;data:blob:https://frame-ancestors https;img-src https;data:media-src https;object-src https;script-src 'unsafe-inline' 'unsafe-eval' https;style-src 'unsafe-inline' https;
content-type: application/json
date: Thu, 02 Jul 2020 11:51:26 GMT
pragma: no-cache
server: nginx
status: 200
strict-transport-security: max-age=360000
x-content-type-options: nosniff, nosniff
x-frame-options: SAMEORIGIN
x-powered-by: Server
x-xss-protection: 1; mode=block

```

Responses

Code	Description
default	successful operation

Step 6 (Optional) Click **Clear** to clear the responses.

GET /control/fabrics/{fabricName}/inventory List the device(s) under the fabric

Parameters Cancel

Name	Description
fabricName * required string (path)	<input type="text" value="easy"/>

6

Execute Clear

Responses Response content type application/json

Curl

```
curl -X GET "https://10.127.117.200/rest/control/fabrics/easy/inventory" -H "accept: application/json"
```

Request URL

```
https://10.127.117.200/rest/control/fabrics/easy/inventory
```

Server response

Note The images are used to illustrate an example. The procedure remains the same for all GET APIs.

REST API Tool

Operations like discovery, fabric management, monitoring, and so on, which are performed in Cisco DCNM Web UI, invoke HTTP calls to fetch and commit the information accessed. The REST API tool enables you to examine the API call by viewing the structure of an API call. This tool also provides a corresponding CURL request to help with building quick prototypes and testing APIs.

The **REST API Tool** dialog box has the following fields.

Table 1: Fields and Description for the REST API Tool Dialog Box

Field	Description
Filter	Enter any keyword to search the log.
scroll to new items	Check this check box to scroll to the new entries when you navigate back to the REST API Tool dialog box after you perform an operation in the Web UI. This check box is checked by default.
clear log	Click clear log to clear the log in the dialog box.
API-docs	Click API-docs to view the Cisco DCNM REST API documentation in the Web UI. Clicking this option takes you to the following URL: https://DCNM-IP/api-docs

All actions you perform in the Cisco DCNM Web UI appear in the API inspector tool. The following information appears in the APIs invoked for every operation:

- HTTP method
- URI
- Payload
- HTTP status code
- Time taken for the operation

Click the URI to expand or collapse each REST method. You can perform the following actions after expanding a REST method:

- **Prettify output:** Click this option to arrange the response code in a more presentable way, which otherwise appears in a single line. Scroll through the response to view it completely.
- **Copy response:** Click this option to copy the response code to your clipboard.
- **Copy CURL request:** Click this option to copy the CURL request to your clipboard.

```
curl -k -XGET --header 'Dcnm-Token: <DCNM_TOKEN>' --header 'Content-Type: application/x-www-form-urlencoded'  
https://<ip-address>/fm/fmrest/dcnm/rbacNavigation/?uname=admin
```

The **REST API Tool** dialog box updates every time the Cisco DCNM Web UI updates.

To use the API inspector from the Cisco DCNM Web UI, perform the following steps:

Procedure

Step 1 Click the **Gear** icon in the top pane.

Step 2 Choose **REST API Tool** from the drop-down list.

The **REST API Tool** dialog box appears and the log is empty before you perform any operation in the Cisco DCNM Web UI.

Step 3 Minimize the **REST API Tool** dialog box.

Note You can also keep the dialog box open, but not close it.

Step 4 Perform an operation in the Cisco DCNM Web UI.

Note You can perform any operation in the Cisco DCNM Web UI like viewing any options, adding, deleting, and so on.

Step 5 Navigate back to the **REST API Tool** dialog box.

The log is populated with the REST APIs fetched depending on the operations you performed.

Note Closing the **REST API Tool** dialog box, instead of minimizing it before performing any operations, clears the log.

For a demo on some of the operations that can be performed using the REST API tool, see the [Using REST API Tool in Cisco DCNM](#) video.

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on standards documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2021 Cisco Systems, Inc. All rights reserved.



Americas Headquarters
Cisco Systems, Inc.
San Jose, CA 95134-1706
USA

Asia Pacific Headquarters
CiscoSystems(USA)Pte.Ltd.
Singapore

Europe Headquarters
CiscoSystemsInternationalBV
Amsterdam,TheNetherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.